


AQ550 Wall Mount Plume Dispersion Kit KIT550PDWM

Included Components:

- | | |
|-----------------------------------|-------------------------|
| 1 ea. fan and housing | 1 ea. curved plume tube |
| 1 ea. rear panel | 2 ea. short wall screws |
| 1 ea. wall mount plate | 2 ea. long wall screws |
| 3 ea. fan housing screws (silver) | 3 ea. plastic washers |


First

1. Unplug unit, and safely remove cartridge.
2. Check if the rear panel on your appliance is the new revision, which has three bosses as shown. If not, replace it with the rear panel included in this kit. Save the panel screws for reuse.

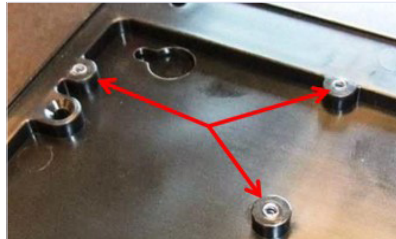


Second

1. Unroll the wires of the fan and insert them inwards through the slit in the pad.
2. Loosen the screws of the pump wire (red and black) twist fan wires together with the pump wire (red to red, and black to black) reinsert and tighten down the screws till secure. Make sure exposed wire is clamped, not rubber insulation.

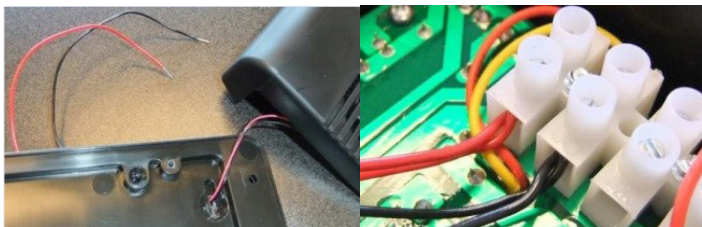

Third

1. Install screws into rear panel, making sure screws go back in their original locations.
2. Place the three plastic washers over the bosses on the rear panel.

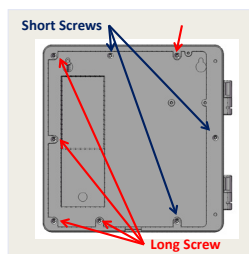


Fourth

1. Remove the shroud from the new fan housing.
2. Secure the fan housing onto the rear panel using the 3 fan housing screws (silver) provided. Make sure the washers are still in place.



Fifth

1. Replace the shroud onto the fan housing. This is done by first hooking the top and snapping it closed like a hinge. Make sure it closes completely, by looking at it from the bottom. No gaps should be visible.

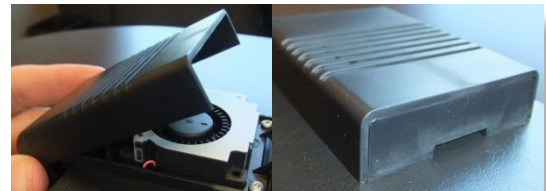

Sixth

1. Before reinstalling, wipe down the appliance inside and out. Check the O-Rings and replace if necessary.
2. Replace the old wall mount plate with the new plate. Use the correct wall screws included with kit.
3. Reinsert the cartridge using the new plume tube that is included in this kit.

