

FOOT INSTALLATION INSTRUCTIONS:


1. Cut out template by cutting along the dotted lines above.
2. Arrange the template on the bottom of the appliance, aligning the designated lines with the door.
3. Mark and drill the holes with a #44 (0.086 in) or 2.25mm drill bit, being careful to drill only through the first layer of plastic.
4. Install the Table Top Feet using the included silver screws. The included washers should be placed between the appliance and the foot, around the front screw, as shown to the right.



REAR PANEL INSTALLATION INSTRUCTIONS:

1. Remove all but the inset screws from the back of the appliance.
2. Lay the Rear Panel on the back of the appliance, with the countersinks facing outwards. Secure with the included black screws. The shorter screw goes in the bottom right hole.

These screws remain

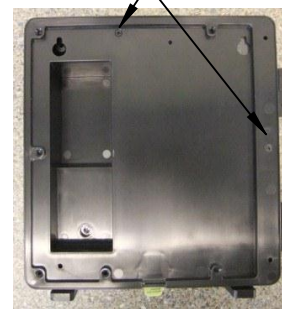

Short Screw