



PERFECTLY SCENTED ENVIRONMENTS

KIT580TT

field assembly & installation

Rev. 2018-05-01

SUPPLIES REQUIRED

- Drill
- 1/16" drill bit
- 3/16" drill bit

COMPONENTS


KIT580TT contains the following:

- 8445 (12) Thread forming screws
- 8828 380/580 Table Top Base
- 8830 Rear Panel
- 8135 Nut
- 8831 Panel Mount Power Jack
- 23607 (4) Bumpers



ASSEMBLY & INSTALLATION


1. Use a 1/16" drill bit on two lower bosses and a 3/16" drill bit at the dimple.

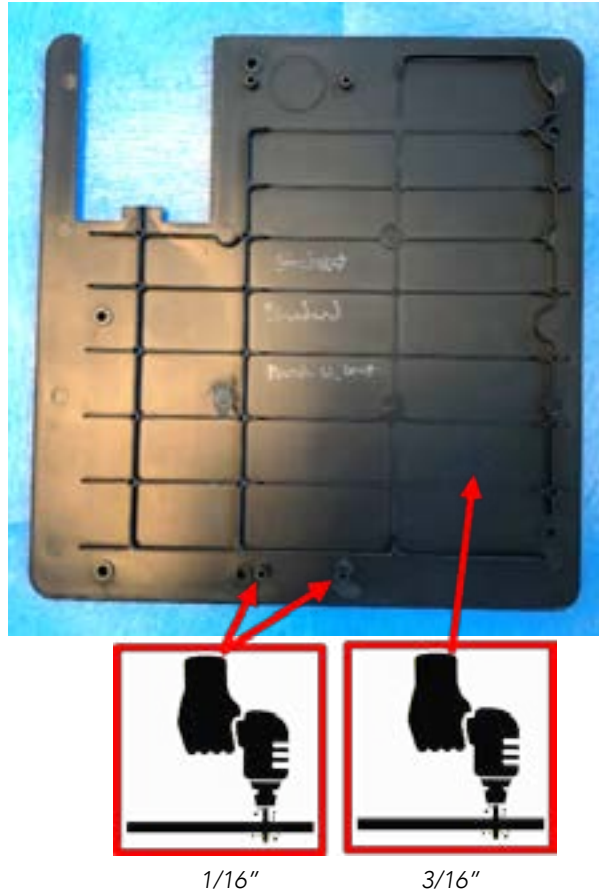

2. Use the nut to secure the power jack on the panel



3. Connect the panel mount power jack to the appliance

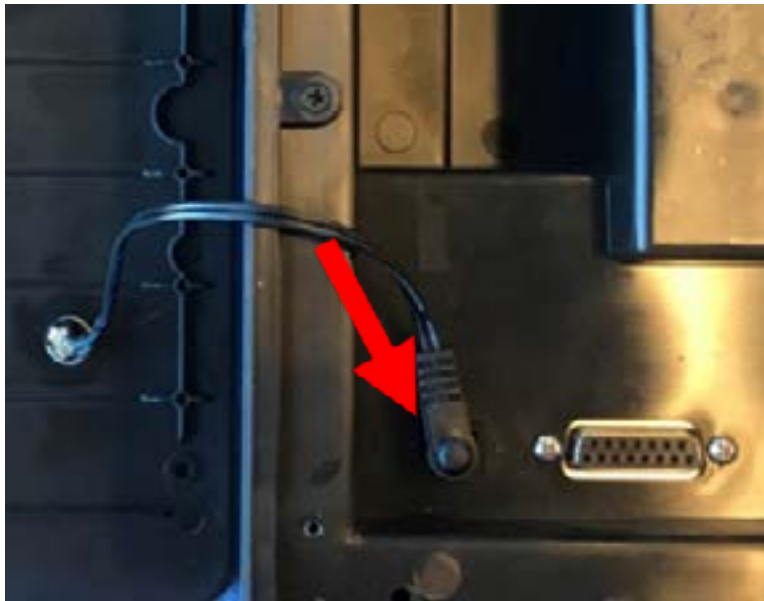

4. Slide the panel into place and secure the panel to the appliance with six screws



5. Secure the base to the panel with two screws



6. Secure the base to the appliance with four more screws



7. Add bumpers to the base.

