


KIT2500PLUME field assembly & installation

COMPONENTS

KIT2500PLUME contains the following:

- 1. 2500 Plume Kit Parts (parts 1a, 1b, 1c are not available separately.
- 2. Washer (2)
- 3. Cable Ties (3)
- 4. Injector Tubing
- 5. Cap
- 6. O-Ring (2)

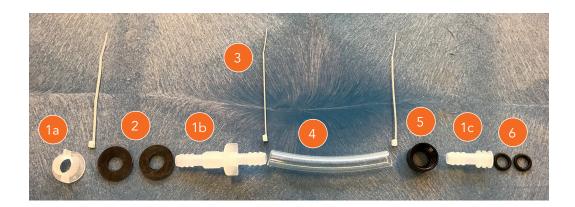

ASSEMBLY & INSTALLATION

1. Install O-Rings (#6) iinto grooves of Stem (#1c).



2. Place Cap (#5) over the Stem (#1c) assembly so the threaded portion of the cap covers the O-Rings.




3. Push Injector Tubing (#4) over the barbed portion of the Stem (#1c), allowing a *small gap* between the end of the tube and the Cap (#5) as shown.



4. Push Bulkhead Fitting (#1b) into the open end of the Injector Tubing (#4) until the two parts contact one another as shown.



5. Cinch Cable Ties (#3) tightly around the Injector Tubing (#4) as shown, *between* the barb and the adjoining parts.

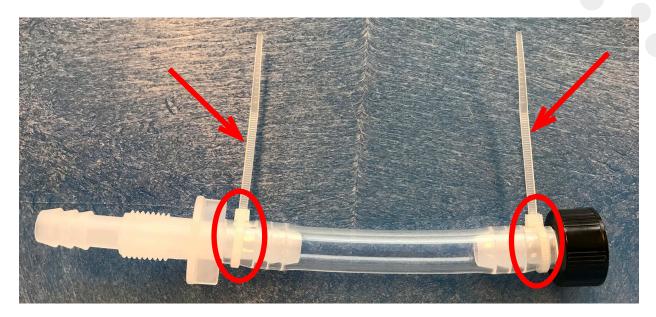

6. Cut off the excess Cable Tie (#3) tails.



7. Place Washer (#2) in position shown.



8. Insert assembly fully through the top of the enclosure as shown.



9. Place Washer (#2) in position.



10. Screw Bulkhead Nut (#1a) into position, tightly enough to close any gaps, and create a seal between the Washers (#2) and the enclosure.

